



## Contents of the box:

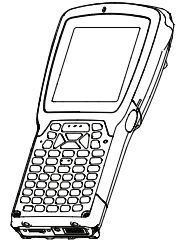

The Workabout Pro4

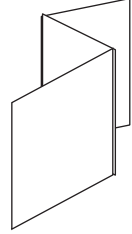

This Guide




Additional documentation  
(dependent on order)

## Features: Front



Speaker

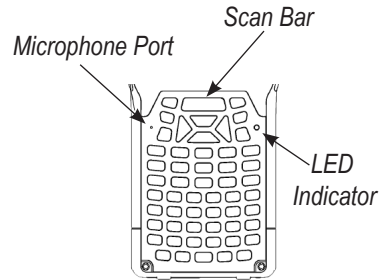


Microphone Port

Scan Bar

LED Indicator


## Features: Back and Ports

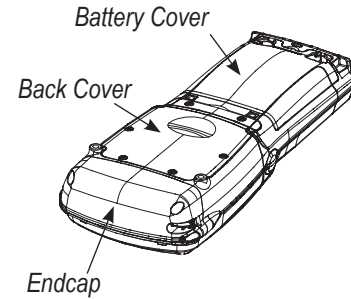

Battery Cover

Back Cover

Endcap

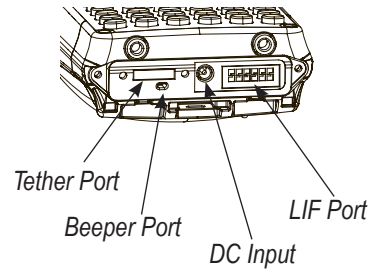

Tether Port


Beeper Port

DC Input


LIF Port

## Getting Started


### 1 Insert the battery.

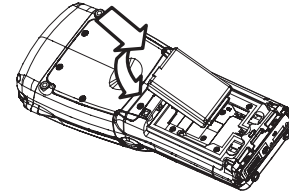

### 2 Close and lock the battery cover.

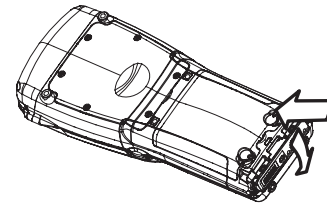


Battery Fasteners

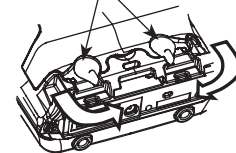


Turn the fasteners towards the centre of the unit to lock the battery cover.

### 3 Charge the battery. The power adaptor may be plugged directly into the Workabout Pro4.

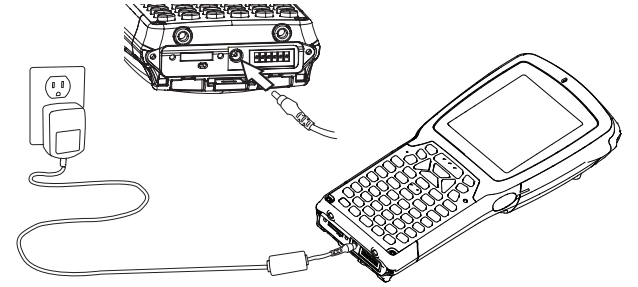

The Workabout Pro4 may also be charged in a Single Bay USB Cradle.

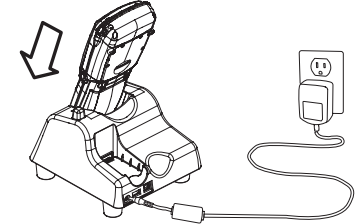

Note: Use only the universal AC power adaptor approved by Zebra for the Workabout Pro4.

Allow the Workabout Pro4 to charge for 2 to 4 hours.



5 - 40°C

41 - 104°F




2-4 h

Note: Full battery performance is only reached after the first few full charge/discharge cycles.

Over

- 4 Turn the unit on.** Press the **Power** button for a few seconds.

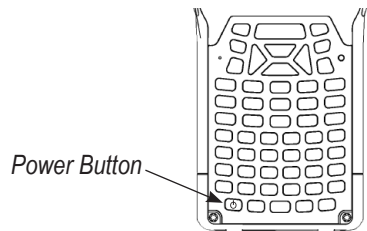

- 5 Connect the Workabout Pro4 to the host computer.** Connect through a Single Bay USB Cradle.

- 6 Install ActiveSync®.**

Go to the *Microsoft® Download Center* and follow the instructions to download and install ActiveSync 4.5 or higher.

Note: ActiveSync is not needed when connecting to a host computer that uses the Windows® Mobile Device Center (such as Microsoft® Windows Vista®).

- 7 Configure ActiveSync.** Follow the onscreen instructions provided by ActiveSync to establish a connection between the host computer and the Workabout Pro4.

To turn the Workabout Pro4 off, do one of the following:

- Press the **Power** button, or
- If running Windows CE, choose **Shut down** from the **Start** menu.

### Resetting the unit

**Important:** Resetting may result in data loss.

To perform a warm reset:

- Press the **FN/BLUE** key and the **Power** button simultaneously for a minimum of four seconds.  
*During a warm reset, running programs are halted. The contents of RAM, flash memory and the registry are preserved.*

To perform a cold reset:

- Press the **FN/ORANGE** key, the **FN/BLUE** key, and the **Power** button simultaneously for a few seconds.  
*During a cold reset, running programs are halted and RAM memory is cleared. The contents of flash memory and the registry are preserved. The operating system is reloaded.*

Zebra reserves the right to make changes to any product to improve reliability, function, or design.

Zebra does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Zebra products might be used. An implied license exists only for equipment, circuit, and subsystems contained in Zebra Products.

### Warranty

For the complete Zebra hardware product warranty statement, go to:  
<http://www.zebra.com/warranty>



Zebra Technologies Corporation  
Lincolnshire, IL, U.S.A.  
<http://www.zebra.com>

Zebra and the Zebra head graphic are registered trademarks of ZIH Corp. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company.

© 2015 Symbol Technologies, Inc.



8 0000297-001

## WORKABOUT PRO4 HAND-HELD COMPUTER (7528 Long and 7528 Short Versions)

### Quick Start Guide

February 19, 2015  
PN 8000297-001.A