


TC70 QUICK START GUIDE


FEATURES

Note: Remove protective shipping film that covers the touch screen, exit window and camera window before using.

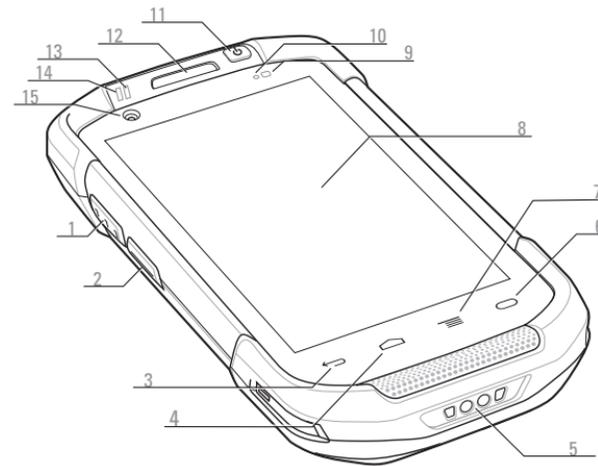

- | | |
|-----------------------------|------------------------------|
| 1 PTT Button (programmable) | 8 Touch Screen |
| 2 Scan Button | 9 Light Sensor |
| 3 Back Button | 10 Proximity Sensor |
| 4 Home Button | 11 Power Button |
| 5 Power Input | 12 Receiver |
| 6 Search Button | 13 Charging/Notification LED |
| 7 Menu Button | 14 Data Capture LED |
| | 15 Front-facing Camera |

Note 1: To reset the TC70, press and hold the Power button until the menu appears and then select **Reset**.

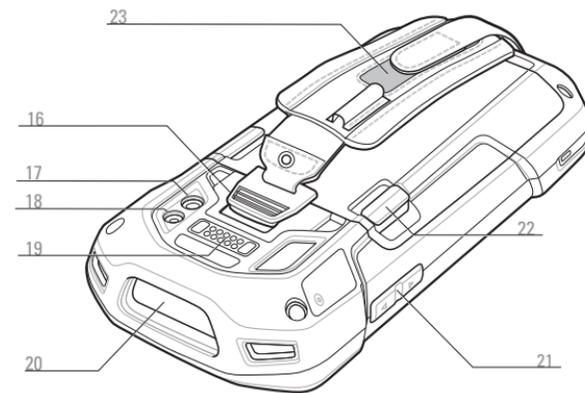

- | | |
|------------------------------|--------------------------|
| 16 Hand Strap Mounting Point | 20 Exit Window |
| 17 Camera Flash | 21 Volume Button |
| 18 Rear-facing Camera | 22 Battery Release Latch |
| 19 Interface Connector | 23 Hand Strap |


Notifications

Data Capture LED:

- Green: Good Decode
- Red: Data capture in process
- Blue: Application notification

Charging/Notification LED:

- Slow blinking amber: Battery charging
- Solid green: Fully charged
- Fast blinking amber: Charging error
- Slow blinking red: Charging aged battery
- Solid red: Fully charged aged battery
- Fast blinking red: Charging error aged battery
- Slow blinking blue: Application notification

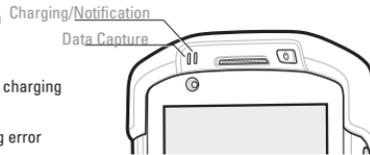


CARD INSTALLATION


MicroSD Card Installation (Optional)

1. Lift the access door.
2. Insert the microSD card into the card holder. Push the card all the way into the card holder.

NOTE:
Proper position of the microSD card — the card connector (i.e., gold contacts) should be facing down.


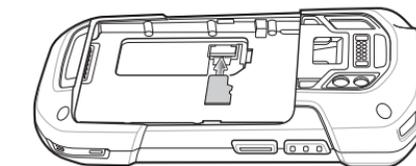


3. Replace the access door. Ensure that it is properly seated.

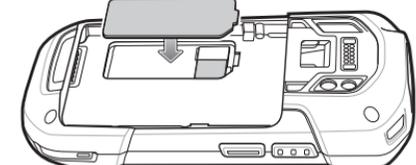


HANDSTRAP AND BATTERY INSTALLATION


1. Remove hand strap filler plate.
2. Insert the hand strap plate into the handstrap slot.

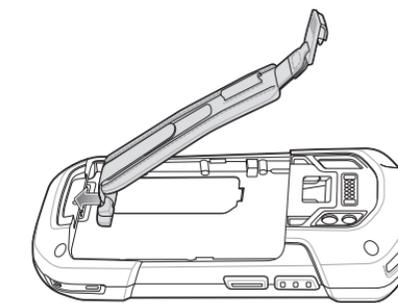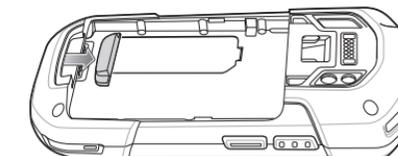


3. Insert the bottom of the battery into the battery compartment.

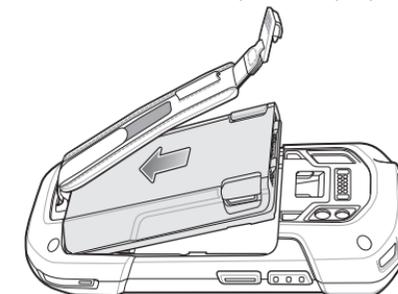

4. Rotate the battery down into the battery compartment and press the battery down until it snaps into position.

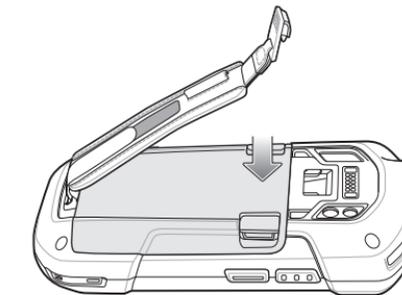


5. Place the hand strap clip into the hand strap attachment slot and pull down to lock into place.

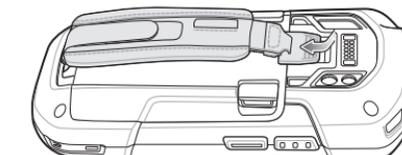


6. Lift the hand strap ribbon off the hook material.
7. Slide the pad and adjust the ribbon for best fit.
8. Press the ribbon down to secure to hand strap.

BATTERY INSTALLATION


1. Insert the bottom of the battery into the battery compartment.

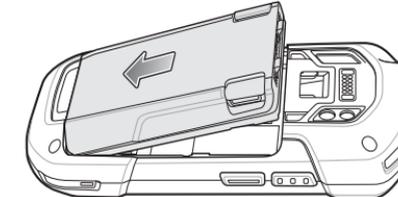

2. Rotate the battery down into the battery compartment.


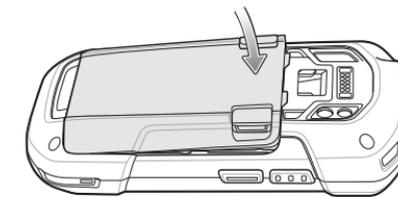


3. Press the battery down until it snaps into position.

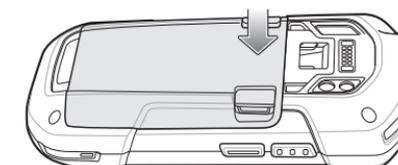

BATTERY REMOVAL

1. Press the Power button until the menu appears.
2. Touch **Power Off**.
3. If installed, unlatch the hand strap. Push the hand strap clip up toward the top of the TC70 and then lift.
4. Press the battery release latches in and lift the battery from the TC70.

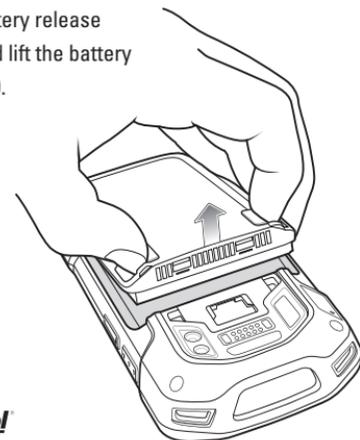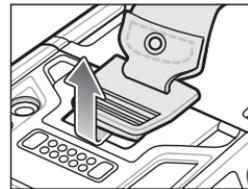

symbol

Symbol Technologies, Inc.
Holtsville, NY 11742-1300, U.S.A.


Symbol® is a registered trademark of Symbol Technologies, Inc. All other trademarks and service marks are proprietary to their respective owners.
© 2014 Symbol Technologies, Inc. All rights reserved.




MN000976A02 Rev. A — March 2015

ACCESSORIES

5-Slot Charge Only Cradle

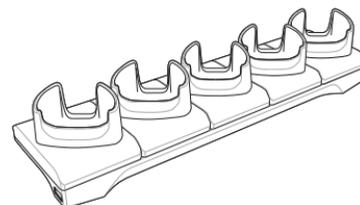


5-Slot Charge Only Cradle with Battery Charger

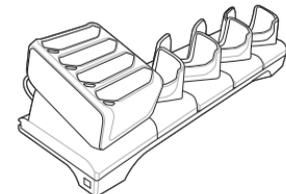

Magnetic Stripe Reader



5-Slot Ethernet Cradle

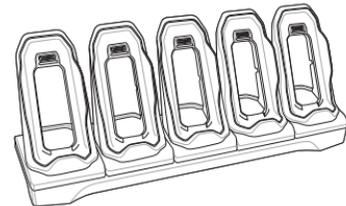

2-Slot Charge Only Cradle



Charging Cable Cup




4-Slot Battery Charger



2-Slot USB/Ethernet Cradle



Snap-On USB Cable

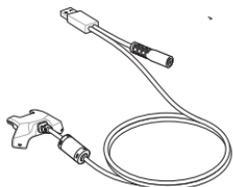


Battery Charger Adapter



Audio Adapter



 Stylus with Tether




Holster




For more information, see the *TC70 User Guide* and the *TC70 Integrator Guide* available at: <http://www.zebra.com/support>.

DATA CAPTURE OPTIONS

Imaging

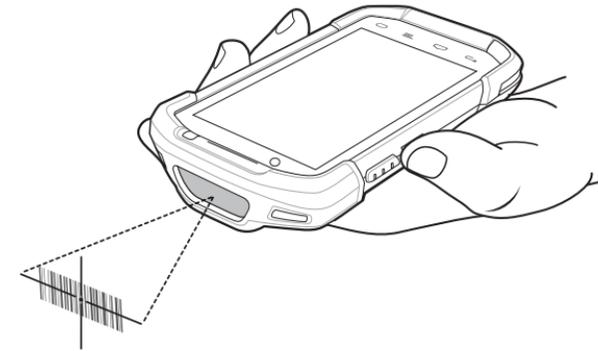

1. Ensure that an application is open and a text field is in focus (text cursor in text field).
2. Point the exit window at the bar code.
3. Press and hold the **Scan** button.
4. The red laser aiming pattern turn on to assist in aiming. When the TC70 decodes the bar code the Data Capture LED light green and a beep sounds.
5. Release the **Scan** button.

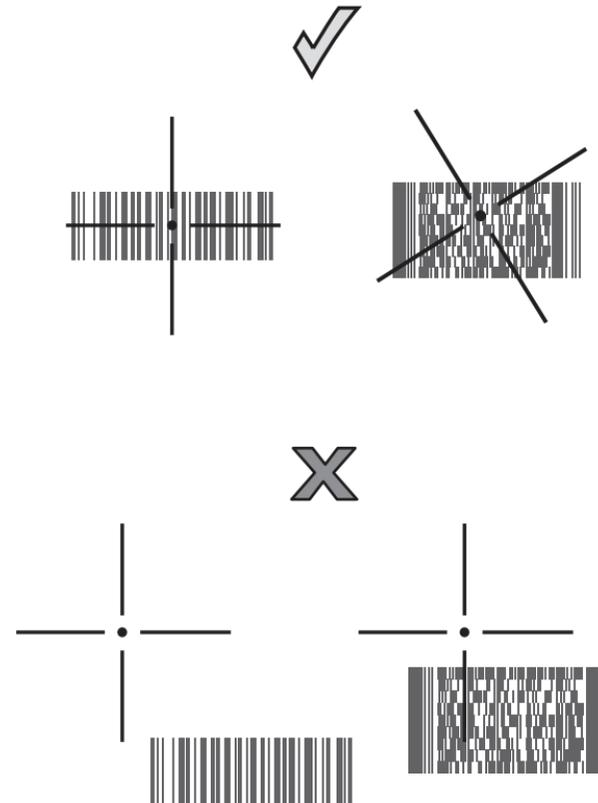


Camera Photo



1. Touch **Camera**.
2. Point the TC70 at an object.
3. Touch the on-screen shutter button.

AVOID EXTREME WRIST ANGLES

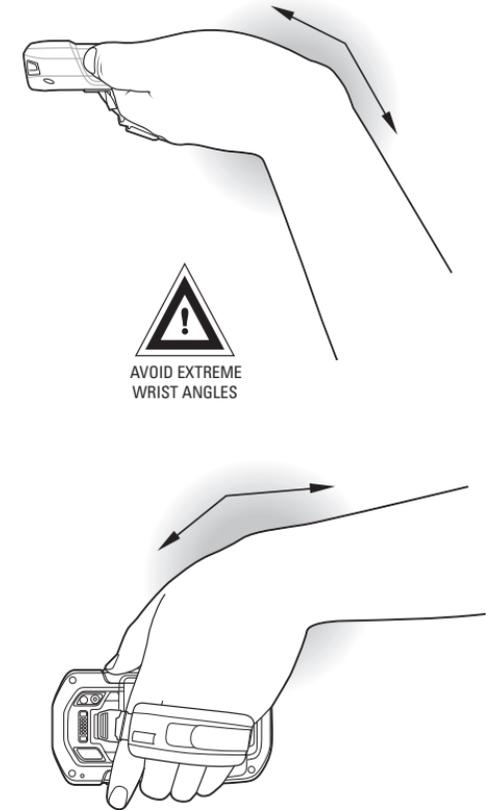

AVOID EXTREME WRIST ANGLES