




Contents of the box:

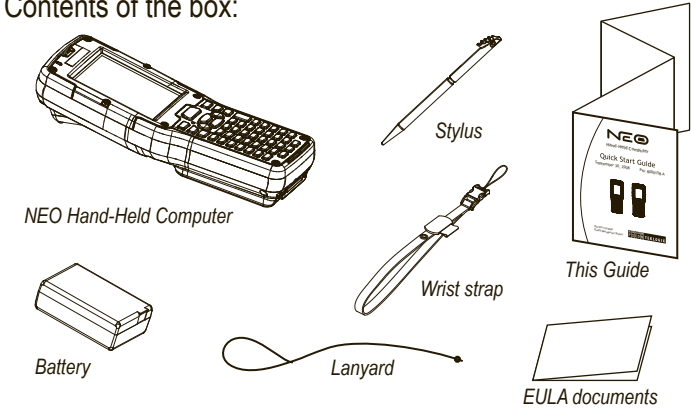


Features: Front

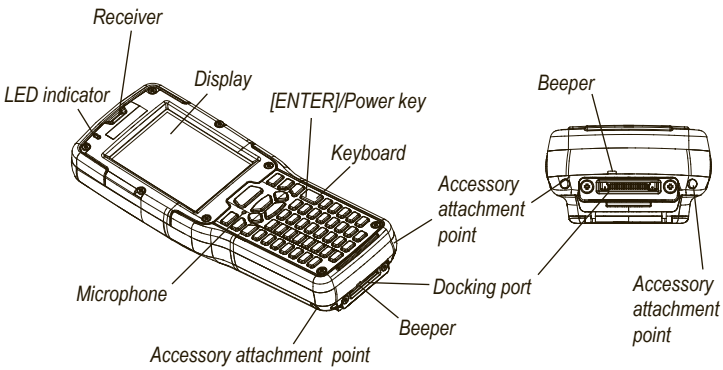


Features: Back

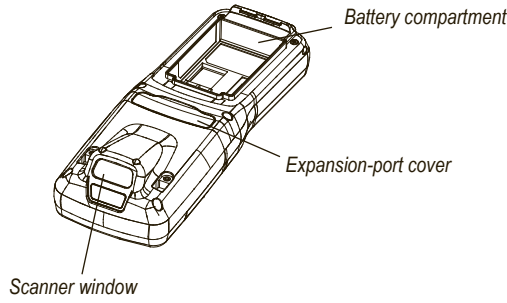


Features: Battery Compartment

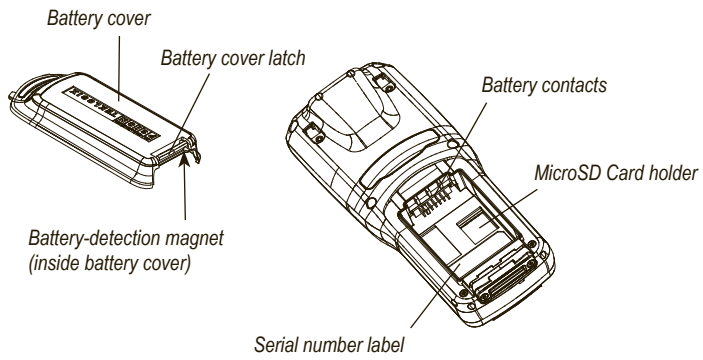

Features: Alphanumeric Keyboard

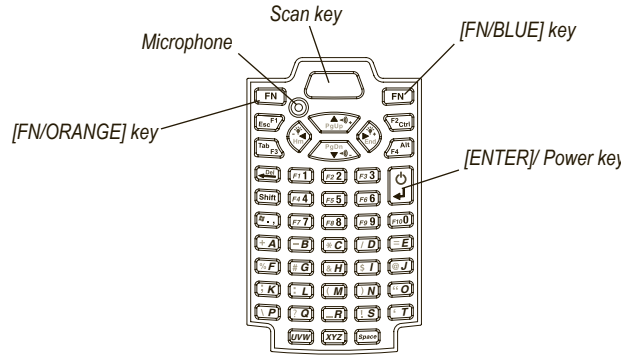


Features: Numeric Keyboard

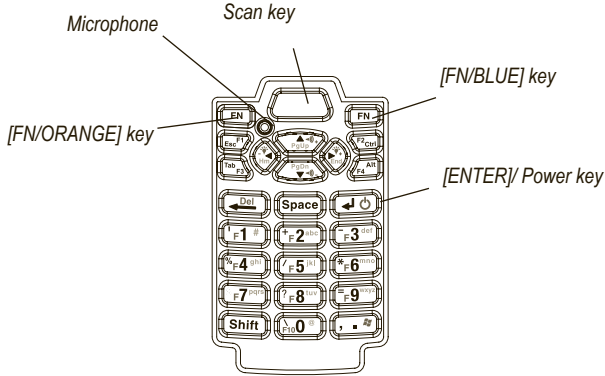


Getting Started


**1** Unlatch and open the battery compartment.

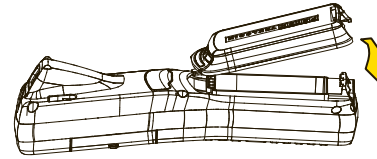

**2** Insert the battery.

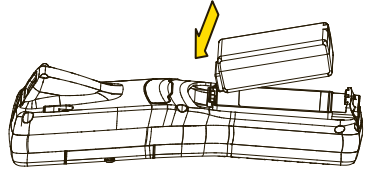

**3** Close and latch the battery compartment.

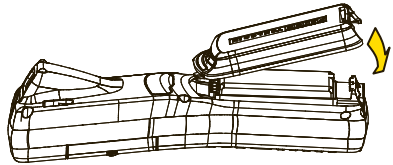

Over


4

**Charge the battery.**

Insert the NEO into a Docking Station or connect a charger.

Note: During charge, the LED indicator on the NEO is YELLOW until charging reaches 75%. Between 75% and 95% the indicator flashes GREEN slowly, and, above 95%, the indicator is GREEN continuously.  
The LED indicator on the Docking Station behaves the same when a spare battery is being charged.

Note: Use only the universal AC power supply approved by Psion Teklogix for use with the Docking Station.

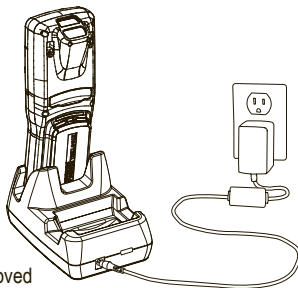

Allow the NEO to charge for three hours before first use.



5 - 40 °C  
41 - 104 °F




3h

Note: Full battery performance is only reached after the first few charge/discharge cycles.

5

**Turn the unit on.**

Press the [ENTER]/Power key for two seconds.

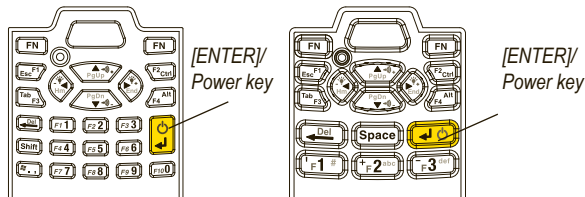

To suspend the NEO, do either of the following:

- Press and release the [FN/BLUE] key, then press the [ENTER] key.
- Select **Shutdown**, then select **Suspend** from the **Start** menu.

**Resetting the NEO**

**Important:** Resetting the unit may result in data loss.

To warm-reset the NEO:

- Press the [BLUE] and [ENTER] keys simultaneously for six seconds, or
- Select **Shutdown**, then select **Warm Reset** from the **Start** menu.

Psion Teklogix and NEO are trademarks of Psion Teklogix Inc. Other product names mentioned in this document are trademarks or registered trademarks of other hardware, software, or service providers and are used herein for identification purposes only.



8000158  
Rev. A


# NEO™

## Hand-Held Computer

### Quick Start Guide

September 30, 2008

PN: 8000158.A

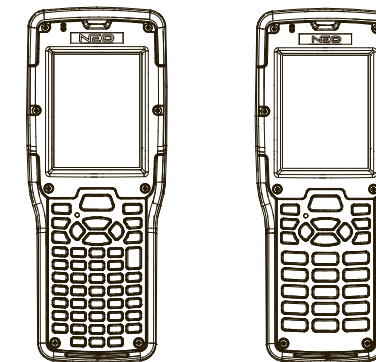

ISO 9001 Certified  
Quality Management System

